

Contents

1	Introduction	2
1.1	Intended use	2
1.2	Product key	3
1.3	Scope of delivery	4
1.4	Product description	4
2	Safety instructions	5
2.1	Important advice	5
2.2	General indication of risk	6
3	Transport and storage	8
4	Installation and connection	9
4.1	Requirements to the installation site	9
4.2	Installation	9
4.3	Special condition moist sample gas	9
4.3.1	Conversion to pump body pointing down	10
4.4	Connecting gas lines	11
4.5	Electrical connections	11
5	Operation and control	13
5.1	Switching on the sample gas pump	13
5.2	Operating the sample gas pump	14
6	Maintenance	15
6.1	Replacing the inlet and outlet valves	16
6.2	Replacing the O-ring on the bypass valve (optional)	16
6.3	Replacing parts inside the pump housing	17
6.4	Replacing the bellow	17
6.5	Crank gear replacement	18
6.6	Assembly of the sample gas pump	18
7	Service and repair	19
7.1	Troubleshooting	20
7.2	Spare parts and accessories	20
8	Disposal	21
9	Appendices	22
9.1	Technical data	22
9.2	Feed curve	22
9.3	Dimensions P1.1 (115 V / 230 V)	23
9.4	Dimensions P1.1 (12 V DC or 24 V DC)	23
9.5	Dimensions P1.1E Pumpe (all voltages)	24
10	Attached documents	25